






PASSENGER ELEVATOR (MACHINE-ROOM-LESS SYSTEM) Series-IP Version2

1800kg, 2025kg, 2250kg, 2500kg



ELENESSA

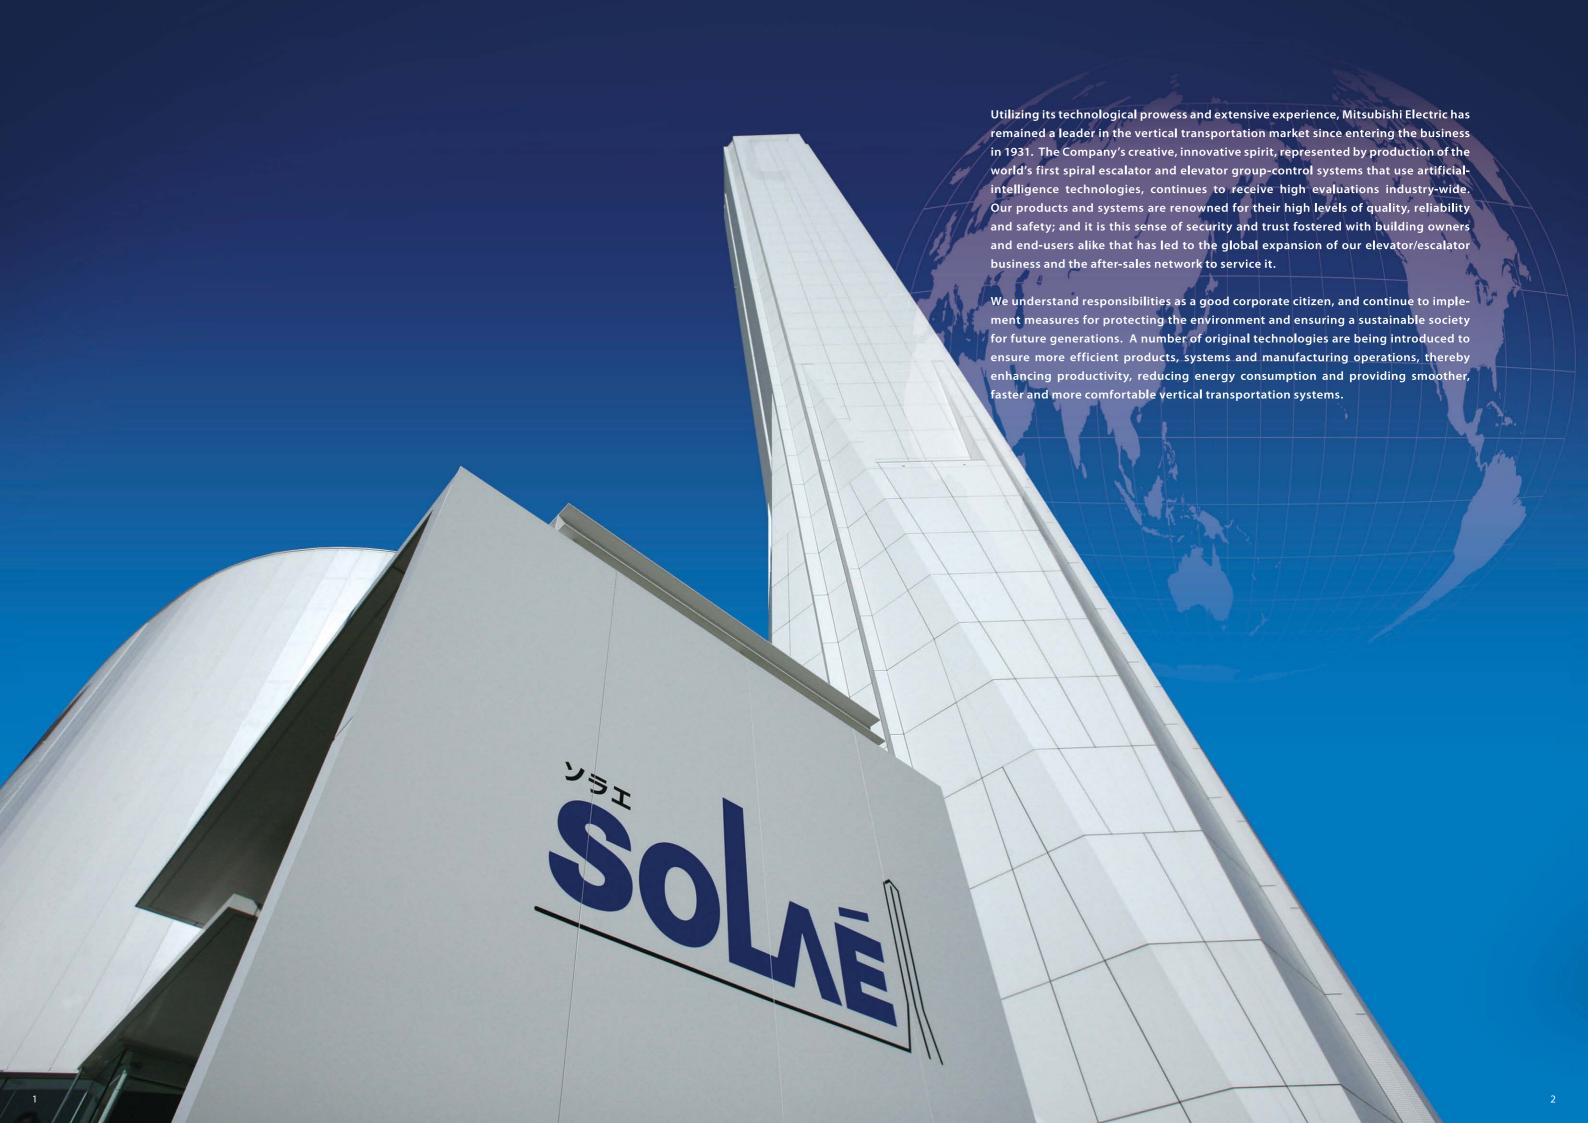

Principle

Based on our policy, "Quality in Motion", we provide elevators and escalators that will satisfy our customers with high levels of comfort, efficiency, ecology and safety.

Efficiency

Comfort



Ecology

Safety

Mitsubishi Electric elevators, escalators and building management systems are always evolving, helping achieve our goal of being the No.1 brand in quality. In order to satisfy customers in all aspects of comfort, efficiency and safety while realizing a sustainable society, quality must be of the highest level in all products and business activities, while priority is place on consideration for the environment. As the times change, Mitsubishi Electric promises to utilize the collective strengths of its advanced and environmental technologies to offer its customers safe and reliable products while contributing to society.

We strive to be green in all of our business activities.


We take every action to reduce environmental burden during each process of our elevators' and escalators' lifecycle.



Contents

Green Technology	5-6
Machine-room-less	7-8
Group Control	9–10
Standard design	11–12
Features	13-16
Basic Specifications and Important Information on Elevator Planning	17–18

Application

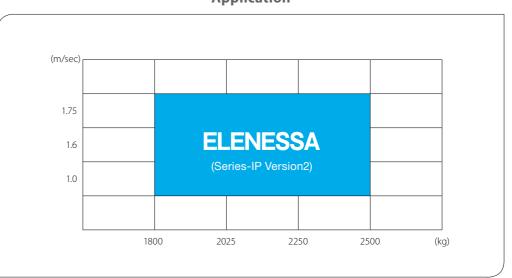






Using Energy Wisely

Our long-term commitment to developing energy-efficient elevators has created systems and functions that make intelligent use of power.

Milestones of Energy-saving Technologies in Elevator Development

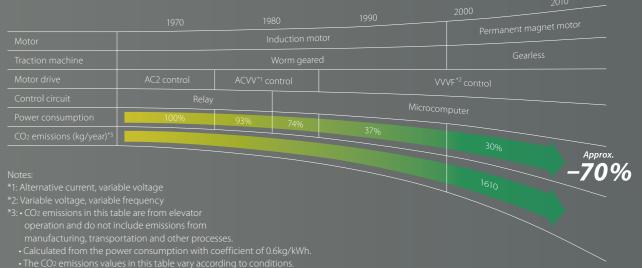


SUSTAINABLE ENERGY USE

Mitsubishi Electric's leading-edge technologies have made it possible for elevators to conserve energy. Our regenerative converter makes the most of power generated by the traction machine. Additionally, thanks to the joint-lapped core in permanent magnet (PM) motor and energy-saving features, the elevators use energy more wisely and efficiently.

Regenerative Converter (PCNV) (Optional)


Efficient use of power

Elevators usually travel using power from a power supply (powered operation); however, when they travel down with a heavy car load or up with a light car load (regenerative operation), the traction machine functions as a power generator. Although the power generated during traction machine operation is usually dissipated as heat, the regenerative converter transmits the power back to the distribution transformer and feeds it into the electrical

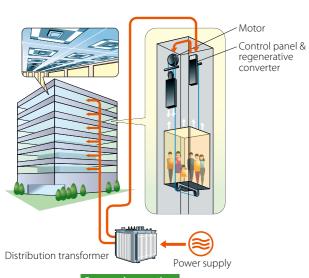

network in the building along with electricity from the power supply. Compared to the same type of elevator without a regenerative converter, this system provides an energy-saving effect of up to 35%. (Reduction in CO₂ emissions: 1400 kg/year)

In addition, the regenerative converter has the effect of decreasing harmonic currents.

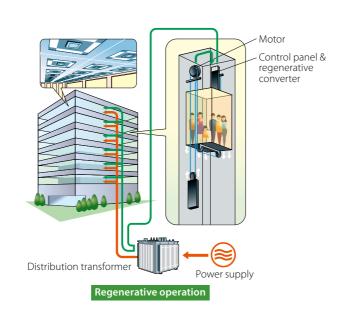

Joint-lapped Core in Permanent Magnet (PM) Motor

Smaller carbon footprint

The joint-lapped core built in the PM motor of the traction machine features flexible joints. The iron core can be like a hinge, which allows coils to be wound around the core more densely, resulting in improved motor efficiency and compactness. High-density magnetic field is produced, enabling lower use of energy and resources and reduced CO2 emissions.



Energy-saving Features

Curbing energy consumption

Mitsubishi Electric offers features that help to reduce the energy consumption of elevators.

Energy-saving Operation

– Number of Cars (ESO-N) (Optional for ΣAI-22)

The number of service cars is automatically reduced to some extent without affecting passenger waiting time.


Energy-saving Operation

- Allocation Control (ESO-W) (ΣAI-2200C only)
Based on each elevator's potential energy consumption, the system selects the elevator that best balances operational efficiency and energy consumption.

Car Light/Fan Shut Off

- Automatic (CLO-A/CFO-A)


The car lighting/ventilation fan is automatically turned off if there are no calls for a specified period.

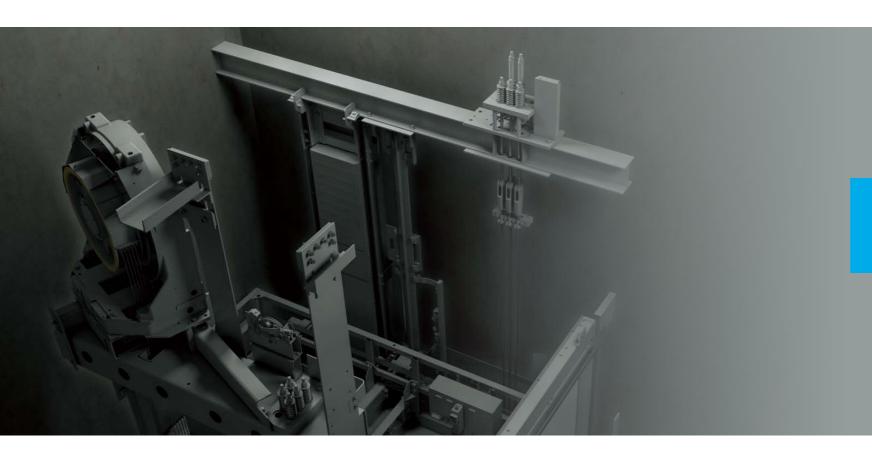

Machine-room-less

SPACE-SAVING

As all equipment is installed within the hoistway, there are fewer restrictions on building design except for the actual space required for the shaft. Architects and interior designers have more design freedom.

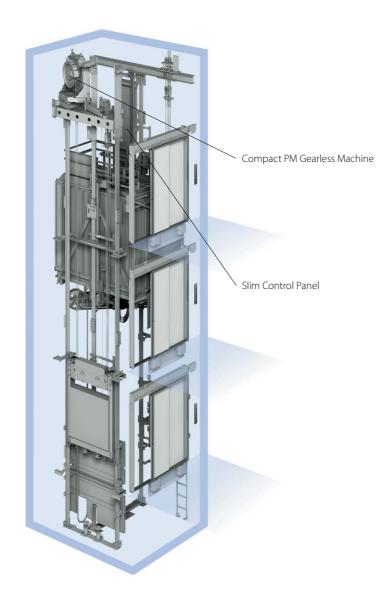

Compact PM Gearless Machine

The gearless traction machine with a PM (permanent magnet) motor is packed with cutting-edge technology, such as our unique stator-core structure and built-in double brakes.

This optimized motor design dramatically reduces the level of torque ripple, which positively affects the quality of the ride. So even though the machinery is compact, the ride is smooth, quiet and comfortable.

Furthermore, the PM motor suppresses harmonic noise and torque ripple, providing greater riding comfort.

Slim Control Panel

More technological advances, such as the high-accumulation LSI and low-noise PWM inverter, enable the VVVF (variable voltage, variable frequency) inverter to deliver smooth, high-precision control of the traction machine.

In addition, an IPU (Integrated Power Unit) acts as a high-efficiency power supply circuit for the motor drive and, along with the PM motor, delivers great energy-savings. The result is more efficient, more reliable drive control.



7




EFFICIENT TRANSPORTATION

Mitsubishi Electric's breakthrough Al Neural Network* technology in elevator control enhances transport efficiency and reduces passenger waiting time through optimum car allocation, which allows elevators to use energy effectively. Two basic group control systems offer a variety of innovative group control features.

Note: *Neural Network is a mathematical model that emulates the structure of the nerves and cells of the human brain and its information processing mechanism.


Group Control Systems	Suitable Building Size	Number of Cars in a Group
ΣAI-22 System	Small to medium	3 to 4 cars
ΣAI-2200C System	Large (Especially, a building with dynamic traffic conditions)	3 to 8 cars

The features introduced on these pages are applicable to Σ Al-2200C only. Please refer to page 15 and 16, and the Σ Al-2200C brochure for other features and details.

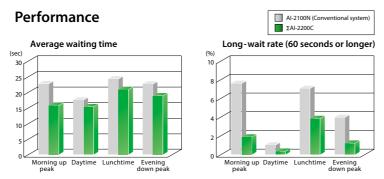

Cooperative Optimization Assignment

When a hall call is registered, the algorithm assumes near-future calls that could require long waits. Through evaluation of the registered hall call and the forecasted call, the best car is assigned. All cars work cooperatively for optimum operation.

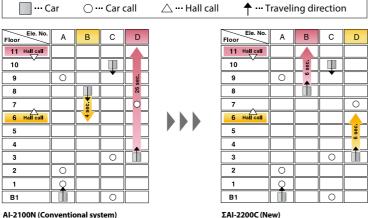

Al-2100N (Conventional system)
[A hall call is registered at 6th Fl.]
Allocates the closest car B.
[Another hall call is soon registered at 11th Fl.]
Allocates D. resulting in long wait of 26 sec

[A hall call is registered at 6th Fl.]
Allocates D, which is moving upward.
[Another hall call is soon registered at 11th Fl.]
Allocates B, which immediately arrives at the floor

Dynamic Rule-set Optimizer


Selecting optimum car allocation through rule-set simulations

Based on real traffic data, passenger traffic is predicted every few minutes. According to the prediction, real-time simulation selects the best rule-set (multiple rules have been set as car allocation patterns), which optimizes transport efficiency.

Destination Oriented Prediction System (DOAS-S) (Optional)

Allocates passengers to cars depending on destination floors

When a passenger enters a destination floor at a hall, the hall operating panel immediately indicates which car will serve the floor. Because the destination floor is already registered, the passenger does not need to press a button in the car. Furthermore, dispersing passengers by destination prevents congestion in cars and minimizes their waiting and traveling times.

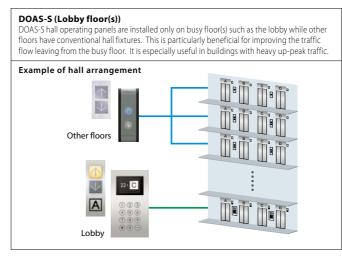


DOAS-S (All floors)
DOAS-S hall operating panels are installed on all floors. Cars receive destination information from all floors to provide the best service for more complex traffic conditions throughout the day.

Example of hall arrangement

All floors

Please consult our local agents for DOAS-S (all floors).

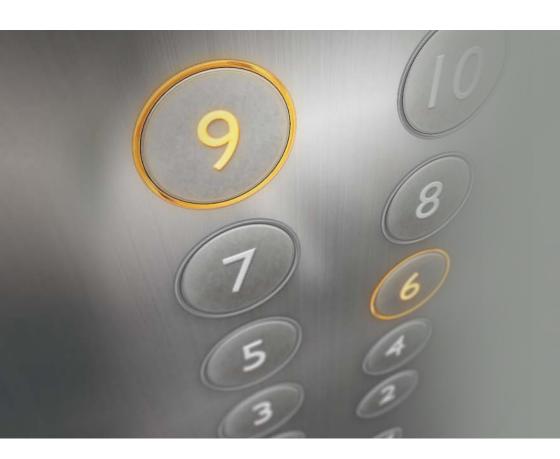

Standard design

Car



Car Design Example

Walls SUS-HL
Transom panel SUS-HL
Doors SUS-HL
Front return panels SUS-HL
Kickplate Aluminum
Flooring PR803
Car operating panel CBV1-C760



Ceiling : Painted steel sheet (Y033) with a milky white resin lighting cover Lighting: Central lighting

Car operating panel



CBV1-C760*1 Segment LED indicators*2 Tactile button with yellow-orange lighting

Hall -

Narrow Jamb: E-102



Hall Design Example

Jamb ————	- SUS-HL
Doors —	- SUS-HL
Hall position indicator	
and button	PIV1-A710N Boxless

Hall position indicators and buttons

Metal-like resin faceplates





PIV1-A710N Boxless

PIV1-A720N Boxless

Segment LED indicators*2
Tactile button with yellow-orange lighting

Note

*1: Maximum number of floors: 22 floors *2: Some letters of the alphabets are not available. Please consult our local agents for details.

Actual colors may differ slightly from those shown. Please refer to the design guide for details and other designs.

Features (1/2)

Feat	ture	Description	1C- 2BC	2C- 2BC	3C to 4C ΣAI-22	3C to 8C ΣΑΙ-2200C
■ EMERGENCY	OPERATIONS	AND FEATURES				
Mitsubishi Emer Device (MELD)	rgency Landing	Upon power failure, a car equipped with this function automatically moves to and stops at the nearest floor using a rechargeable battery, and the doors open to facilitate the safe evacuation of passengers. (Maximum allowable floor-to-floor distance is 10 meters.)	0	0	0	0
Operation by En Source — Automatic/M	nergency Power lanual (OEPS)	Upon power failure, predetermined car(s) uses the building's emergency power supply to move to a specified floor, where the doors then open to facilitate the safe evacuation of passengers. After all cars have arrived, predetermined car(s) resume normal operation.	0	0	0	0
Fire Emergency	Return (FER)	Upon activation of a key switch or a building's fire alarm, all calls are canceled, all cars immediately return to a specified evacuation floor and the doors open to facilitate the safe evacuation of passengers.	0	0	0	0
Firefighters' Emo	ergency	During a fire, when the fire operation switch is activated, the car calls of a specified car and all hall calls are canceled and the car immediately returns to a predetermined floor. The car then responds only to car calls which facilitate firefighting and rescue operations.	0	0	0	0
Earthquake Eme (EER-P/EER-S)	ergency Return	Upon activation of primary and/or secondary wave seismic sensors, all cars stop at the nearest floor, and park there with the doors open to facilitate the safe evacuation of passengers.	0	0	0	0
Supervisory Pan	nel (WP)	Each elevator's status and operation can be remotely monitored and controlled through a panel installed in a building's supervisory room, etc.	0	© #1	0	© #1
MelEye (WP-W) Mitsubishi Eleva Escalators Moni Control System		Each elevator's status and operation can be monitored and controlled using advanced Web-based technology which provides an interface through personal computers. Special optional features such as preparation of traffic statistics and analysis are also available.	0	0	0	0
Emergency Car	Lighting (ECL)	Car lighting which turns on immediately when power fails, providing a minimum level of lighting within the car. (Choice of dry-cell battery or trickle-charge battery.)	0	0	0	0
■ DOOR OPER	ATION FEATUR	ES				
Door Sensor Sel (DODA)	f-diagnosis	Failure of non-contact door sensors is checked automatically, and if a problem is diagnosed, the door-close timing is delayed and the closing speed is reduced to maintain elevator service and ensure passenger safety.	S	S	S	S
Automatic Door (DSAC)	Speed Control	Door load on each floor, which can depend on the type of hall door, is monitored to adjust the door speed, thereby making the door speed consistent throughout all floors.	S	S	S	S
Automatic Door Adjustment (DC		The time doors are open will automatically be adjusted, depending on whether the stop was called from the hall or the car, to allow smooth boarding of passengers or loading of baggage.	_	_	_	S
Reopen with Ha (ROHB)	Ill Button	Closing doors can be reopened by pressing the hall button corresponding to the traveling direction of the car.	S	(S)	S	S
Repeated Door-	close (RDC)	Should an obstacle prevent the doors from closing, the doors will repeatedly open and close until the obstacle is cleared from the doorway.	S	(S)	S	S
Door Nudging F —With Buzzer(N						S
Door Load Dete	ctor (DLD)	When excessive door load has been detected while opening or closing, the doors immediately reverse.	(S)	(S)	S	S
Safety Door Edge (SDE) One side Sensitive door edge(s) detects passe (2S doors)		Sensitive door edge(s) detects passengers or objects during door closing.	S	<u>(S)</u>	S	(S)
	Both sides (CO doors)		S	<u>\$</u>	S	<u>\$</u>
Extended Door-open Button (DKO-TB)		When the button inside a car is pressed, the doors will remain open longer to allow loading and unloading of baggage, a stretcher, etc.		0	0	_
Safety Ray	1-beam	One or two infrared-light beams cover the full width of the doors as they close to detect	0	0	0	0
(SR) 2-beam		passengers or objects. (Cannot be combined with the multi-beam door sensor.)	0	0	0	0
Electronic Door	man (EDM)	Door open time is minimized using safety ray(s) or multi-beam door sensors that detect passengers boarding or exiting.	0	0	0	0
Multi-Beam Doo	or Sensor	Multiple infrared-light beams cover a door height of approximately 1800mm to detect passengers or objects as the doors close. (Cannot be combined with the SR.)	0	0	0	0
Hall Motion Sen	sor (HMS)	Infrared-light is used to scan a 3D area near open doors to detect passengers or objects.	0	0	0	0

Feature	Description	1C- 2BC	2C- 2BC	3C to 4C ΣAI-22	3C to 8C ΣΑΙ-22000
OPERATIONAL AND SERVI	·	ZBC	ZBC	ZAI-ZZ	ZAI-22000
Safe Landing (SFL)	If a car has stopped between floors due to some equipment malfunction, the controller checks the cause, and if it is considered safe to move the car, the car will move to the nearest floor at a low speed and the doors will open.	S	S	<u>s</u>	S
Next Landing (NXL)	If the elevator doors do not open fully at a destination floor, the doors close, and the car automatically moves to the next or nearest floor where the doors will open.	S	<u>s</u>	<u>s</u>	S
Continuity of Service (COS)	A car which is experiencing trouble is automatically withdrawn from group control operation to maintain overall group performance.	_	S	S	S
Overload Holding Stop (OLH)	A buzzer sounds to alert the passengers that the car is overloaded. The doors remain open and the car will not leave that floor until enough passengers exit the car.	S	S	S	S
Automatic Hall Call Registration (FSAT)	If one car cannot carry all waiting passengers because it is full, another car will automatically be assigned for the remaining passengers.	S	S	S	S
Car Call Canceling (CCC)	When a car has responded to the final car call in one direction, the system regards remaining calls in the other direction as mistakes and clears them from the memory.	S	S	S	S
Car Fan Shut Off — Automatic (CFO-A)	If there are no calls for a specified period, the car ventilation fan will automatically turn off to conserve energy. Please refer to page 6.	S	S	S	S
Car Light Shut Off — Automatic (CLO-A)	If there are no calls for a specified period, the car lighting will automatically turn off to conserve energy. Please refer to page 6.	S	S	S	S
Backup Operation for Group Control Microprocessor (GCBK)	An operation by car controllers which automatically maintains elevator operation in the event that a microprocessor or transmission line in the group controller has failed.	_	<u>\$</u>	S	S
Independent Service (IND)	Exclusive operation where a car is withdrawn from group control operation for independent use, such as maintenance or repair, and responds only to car calls.	S	S	S	(S)
False Call Canceling — Automatic (FCC-A)	If the number of registered car calls does not correspond to the car load, all calls are canceled to avoid unnecessary stops.	S	S	S	S
False Call Canceling — Car Button Type (FCC-P)	If the wrong car button is pressed, it can be canceled by quickly pressing the same button again twice.	S	S	S	(S)
Automatic Bypass (ABP)	A fully-loaded car bypasses hall calls in order to maintain maximum operational efficiency.	0	S	S	S
Out-of-service-Remote (RCS)	With a key switch on the supervisory panel, etc., a car can be called to a specified floor after responding to all car calls, and then automatically be taken out of service.	0	0	0	0
Secret Call Service (SCS-B)	To enhance security, car calls for desired floors can be registered only by entering secret codes using the car buttons on the car operating panel. This function is automatically deactivated during emergency operation.	0	0	0	0
Non-service to Specific Floors — Car Button Type (NS-CB)	To enhance security, service to specific floors can be disabled using the car operating panel. This function is automatically deactivated during emergency operation.	0	0	0	0
Non-service to Specific Floors — Switch/Timer Type (NS/NS-T)	To enhance security, service to specific floors can be disabled using a manual or timer switch. This function is automatically deactivated during emergency operation.	0	© #1	0	0
Out-of-service by Hall Key Switch (HOS/HOS-T)	For maintenance or energy-saving measures, a car can be taken out of service temporarily with a key switch (with or without a timer) mounted in a specified hall.	0	0	0	0
Return Operation (RET)	Using a key switch on the supervisory panel, a car can be withdrawn from group control operation and called to a specified floor. The car will park on that floor with the doors open, and not accept any calls until independent operations begin.	0	0	0	0
Attendant Service (AS)	Exclusive operation where an elevator can be operated using the buttons and switches located in the car operating panel, allowing smooth boarding of passengers or loading of baggage.	0	0	0	0
Regenerative Converter (PCNV)	For energy conservation, power regenerated by a traction machine can be used by other electrical systems in the building. Please refer to page 5.	0	0	0	0

Notes: •1C-2BC (1-car selective collective) - Standard, 2C-2BC (2-car group control) - Optional ΣAI-22 (3 to 4-car group control system) - Optional, ΣAI-2200C (3 to 8-car group control system) - Optional • ⑤ = Standard ⑥ = Optional — = Not applicable •#1: Please consult our local agents for the production terms, etc.

13

Features (2/2)

Feature	Description	1C- 2BC	2C- 2BC	3C to 4C ΣAI-22	3C to 8C ΣΑΙ-2200C
■ GROUP CONTROL FEATURE	-				
Expert System and Fuzzy Logic	Artificial expert knowledge, which has been programmed using "expert system" and "fuzzy logic", is applied to select the ideal operational rule which maximizes the efficiency of group control operations.	_	_	\$	8
Psychological Waiting Time Evaluation	Cars are allocated according to the predicted psychological waiting time for each hall call. The rules evaluating psychological waiting time are automatically changed in a timely manner in response to actual service conditions.	_	_	S	S
Cooperative Optimization Assignment	The system predicts a potential hall call, which could cause longer waiting time. Car assignment is performed considering not only current and new calls but also near-future calls. Please refer to page 9.	_	_	_	S
Car Travel Time Evaluation	Cars are allocated to hall calls by considering the number of car calls that will reduce passenger waiting time in each hall and the travel time of each car.	_	_	S	S
Distinction of Traffic Flow with Neural Networks (NN)	Traffic flows in a building are constantly monitored using neural network technology, and the optimum operational pattern, such as Lunchtime Service or Up Peak Service, is selected or canceled accordingly at the appropriate time.	_	_	_	S
Car Allocation Tuning (CAT)	The number of cars allocated or parked on crowded floors is controlled not just according to the conditions on those crowded floors but also the operational status of each car and the traffic on each floor.	_	_	_	S
Dynamic Rule-set Optimizer (DRO)	Traffic flows in a building are constantly predicted using neural network technology, and an optimum rule-set for group control operations is selected through real-time simulations based on prediction results. Please refer to page 10.	_	_	_	S
Peak Traffic Control (PTC)	A floor which temporarily has the heaviest traffic is served with higher priority over other floors, but not to the extent that it interferes with the service to other floors.	_	_	S	S
Strategic Overall Spotting (SOHS)	To reduce passenger waiting time, cars which have finished service are automatically directed to positions where they can respond to predicted hall calls as quickly as possible.	_	\$	S	\$
Energy-saving Operation — Allocation Control (ESO-W)	The system selects the elevator that best balances operational efficiency and energy consumption according to each elevator's current location and passenger load as well as predicted congestion levels throughout the day. Please refer to page 6.	_	_	_	S
Energy-saving Operation — Number of Cars (ESO-N)	To save energy, the number of service cars is automatically reduced to some extent, but not so much that it adversely affects passenger waiting time. Please refer to page 6.	_	_	0	S
Destination Oriented Prediction System (DOAS-S)	When a passenger enters a destination floor at a hall, the hall operating panel indicates which car will serve the floor. The passenger does not need to press a button in the car. Dispersing passengers by destination prevents congestion in the cars and minimizes their waiting and traveling times. Please refer to page 10.	_	_	_	© #2
Up Peak Service (UPS)	Controls the number of cars to be allocated to the lobby floor, as well as the car allocation timing, in order to meet increased demands for upward travel from the lobby floor during office starting time, hotel check-in time, etc., and minimize passenger waiting time.	_	_	0	0
Down Peak Service (DPS)	Controls the number of cars to be allocated and the timing of car allocation in order to meet increased demand for downward travel during office leaving time, hotel check-out times etc., and minimize passenger waiting time.	_	_	0	0
Main Floor Parking (MFP)	An available car always parks on the main (lobby) floor with the doors open/closed (China only).	0	0	0	0
Forced Floor Stop (FFS)	All cars in a bank automatically make a stop at a predetermined floor on every trip without being called.	0	0	0	0
Special Floor Priority Service (SFPS)	Special floors, such as floors with VIP rooms or executive rooms, are given higher priority for car allocation when a call is made on those floors. (Cannot be combined with hall position indicators.)	_	_	© ^{#1}	0
Closest-car Priority Service (CNPS)	A function to give priority allocation to the car closest to the floor where a hall call button has been pressed, or to reverse the closing doors of the car closest to the pressed hall call button on that floor. (Cannot be combined with hall position indicators.)	_	_	© #1	0
Light-load Car Priority Service (UCPS)	When traffic is light, empty or lightly-loaded cars are given higher priority to respond to hall calls in order to minimize passenger travel time. (Cannot be combined with hall position indicators.)	_	_	© #1	0
Special Car Priority Service (SCPS)	Special cars, such as observation elevators and elevators with basement service, are given higher priority to respond to hall calls. (Cannot be combined with hall position indicators.)	_	_	© ^{#1}	0
Congested-floor Service (CFS)	The timing of car allocation and the number of cars to be allocated to floors where meeting rooms or ballrooms exist and the traffic intensifies for short periods of time are controlled according to the detected traffic density data for those floors.	_	_	0	0

Feature	Description	1C- 2BC	2C- 2BC	3C to 4C ΣAI-22	3C to 8C ΣΑΙ-2200C
Bank-separation Operation (BSO)	Hall buttons and the cars called by each button can be divided into several groups for independent group control operation to serve special needs or different floors.	<u> </u>	© #1	0	0
VIP Operation (VIP-S)	A specified car is withdrawn from group control operation for VIP service operation. When activated, the car responds only to existing car calls, moves to a specified floor and parks there with the doors open. The car will then respond only to car calls.		© #1	0	0
Lunchtime Service (LTS)	During the first half of lunchtime, calls for a restaurant floor are served with higher priority, and during the latter half, the number of cars allocated to the restaurant floor, the allocation timing for each car and the door opening and closing timing are all controlled based on predicted data.	_		0	0
Main Floor Changeover Operation (TFS)	This feature is effective for buildings with two main (lobby) floors. The floor designated as the "main floor" in a group control operation can be changed as necessary using a manual switch.	0	0	0	0
■ SIGNAL AND DISPLAY FEAT	TURES				
Basic Announcement (AAN-B)	A synthetic voice (and/or buzzer) alerts passengers inside a car that elevator operation has been temporarily interrupted due to overloading or a similar cause. (Voice available only in English.)	S	S	S	\$
Flashing Hall Lantern (FHL)	A hall lantern, which corresponds to a car's service direction, flashes to indicate that the car will soon arrive.	0	0	0	S
Car Arrival Chime — Car or Hall (AECC/AECH)	Electronic chimes sound to indicate that a car will soon arrive. (The chimes are mounted either on the top and bottom of the car, or in each hall.)	0	0	0	(Each floor)
Sonic Car Button — Click Type (ACB)	A click-type car button which emits an electronic beep sound when pressed to indicate that the call has been registered.	0	0	0	0
Immediate Prediction Indication (AIL)	When a passenger has registered a hall call, the best car to respond to that call is immediately selected, the corresponding hall lantern lights up and a chime sounds once to indicate which doors will open.	_	_	0	0
Second Car Prediction (TCP)	When a hall is crowded to the extent that one car cannot accommodate all waiting passengers, a hall lantern will light up to indicate the next car to serve the hall.	_	_	_	0
Voice Guidance System (AAN-G)	Information on elevator service such as the current floor or service direction is given to the passengers inside a car. (Voice guidance available only in English.)	0	0	0	0
Auxiliary Car Operating Panel (ACS)	An additional car operating panel which can be installed for large-capacity elevators, heavy-traffic elevators, etc.	0	0	0	0
Inter-communication System (ITP)	A system which allows communication between passengers inside a car and the building personnel.	0	0	0	0
LCD Position Indicator (CID-S)	This 5.7-inch LCD for car operating panels shows the date and time, car positions, travel direction and elevator status messages.	0	0	0	0
Hall LCD Position Indicator (HID-S)	This 5.7-inch LCD for elevator halls shows the date and time, car position, travel direction and elevator status messages.	0	0	0	_
Car Information Display (CID)	This LCD (10.4- or 15-inch) for car front return panels shows the date and time, car position, travel direction and elevator status messages.	0	0	0	0
Hall Information Display (HID)	This LCD (10.4- or 15-inch) for elevator halls shows the date and time, car position, travel direction and elevator status messages.	0	0	0	_

Notes: •1C-2BC (1-car selective collective) - Standard, 2C-2BC (2-car group control) - Optional

- Σ Al-22 (3 to 4-car group control system) Optional, Σ Al-2200C (3 to 8-car group control system) Optional
- (S) = Standard (O) = Optional = Not applicable •#1: Please consult our local agents for the production terms, etc.
- •#2: When DOAS-S is applied, SR or Multi-Beam Door Sensor should be installed. Please consult our local agents when DOAS-S hall operating panels are installed on all floors.

Basic Specifications and Important Information on Elevator Planning

Horizontal Dimensions <1-Door 1-Gate>

Code number	Number of persons	Rated capacity (kg)	Door type	Counter- weight position	Car internal dimensions(mm) AA x BB	Entrance width (mm) JJ	Minimum hoistway dimensions (mm) X x Y
P24	24	1800		Rear	2350×1600	1200	2900×2290
			CO	near	2350×1700	1200	2900×2390
P27	27	2025		Side	1500×2700	1100	2570×3080
			2S	Side	1300 X 2700	1300	2520×3150
P30	30	2250	СО	Rear	2350×1900	1200	2900×2590
P33	33	2500		Side	1800×2700	1100	2820×3080
L 33	33	2500	25	Side	1000 X 2700	1300	2820×3150

<1-Door 2-Gate>

Code number	Number of persons	Rated capacity (kg)	Door type	Counter- weight position	Car internal dimensions(mm) AA x BB	Entrance width (mm) JJ	Minimum hoistway dimensions (mm) X x Y
P27	27	2025	CO		1500×2600	1100	2570×3154
F2/	27	2023	2S	Side	1500 X 2600	1300	2520×3298
P33	33	2500	CO	Side	1800×2600	1100	2820×3154
r33	53	2300	25		1000 X 2000	1300	2820×3298

Terms of the table

- The contents of this table are applied to standard specification only. Please consult our local agents for other specifications.
- Rated capacity is calculated at 75kg per person, as required by EN81-1.
- CO: 2-panel center opening doors, 2S: 2-panel side sliding doors.
- Minimum hoistway dimensions (X and Y) are after waterproofing of pit and do not include plumb tolerance.
- · Minimum hoistway dimensions (X and Y) should be increased if fireproof landing door is required.

Vertical Dimensions <1-Door 1-Gate & 1-Door 2-Gate>

Rated speed (m/sec)	Rated capacity (kg)	Maximum travel (m)	Maximum number	Overnead (IIIII)		Minimum pit depth (mm) PD	Minimum floor height (mm)
			01110013	1D1G	1D2G	FD	(111111)
	1800				_		
1.0	~2025			4220	4450	1630	
1.0	~2250			4220	_		
	~2500				4450	1730	
	1800				_		
1.6	~2025	60	าา	22 4380 4610 173	1730	2500	
1.0	~2250	00	22		_] 1730	2500
	~2500				4610		
	1800				_		
1.75	~2025			4440	4670	1770	
1./3	~2250			4440	_	1770	
	~2500				4670		

[Terms of the table


- $\bullet \ \, \text{The contents of this table are applied to standard specification only. Please consult our local agents for other specifications.}$
- · Minimum overhead (OH) and minimum pit depth (PD) should be increased when the travel is over 30m
- Some specifications require more than 2500mm as a minimum floor height. Please consult our local agents if the floor height is less than entrance height HH + 700mm, and the elevator is 1-Door 2-Gate.

Work Not Included in Elevator Contract


The following items are excluded from Mitsubishi Electric's elevator installation work, and are therefore the responsibility of the building owner or general contractor:

- Architectural finishing of the walls and floors in the vicinity of the entrance hall after installation has been completed.
- $\bullet \ \, \text{Construction of an illuminated, ventilated and waterproofed elevator hoistway}. \\$
- A ladder to the elevator pit.
- Provision for cutting the necessary openings and joists.
- Separate beams, when the hoistway dimensions markedly exceed the specifications, and intermediate beams when two or more elevators are installed.
- All other work related to building construction.
- The power-receiving panel and the electrical wiring for illumination, plus the power from them to the electrical room.
- The laying of conduits and wiring between the elevator pit and the terminating point for the devices installed outside the hoistway, such as the emergency bell, intercom, monitoring and security devices, etc.
- The power consumed in installation work and test operations.
- The test provision and subsequent alteration as required, and eventual removal of the scaffolding as required by the elevator contractor, and any other protection of the work as may be required during the process.
- The provision of a suitable, locked space for the storage of elevator equipment and tools during elevator installation.
- The security system, such as a card reader, connected to Mitsubishi Electric's elevator controller, when supplied by the building owner or general contractor.
- * Work responsibilities in installation and construction shall be determined according to local laws. Please consult our local agents for details.

<1-Door 1-Gate>

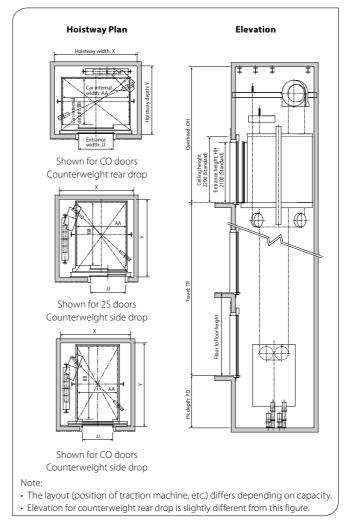

<1-Door 2-Gate>

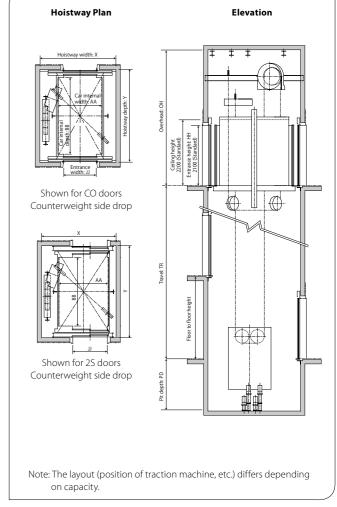

Applicable Standards

The ELENESSA complies with EN81-1. For details of compliance with other national regulations, please consult our local agents.

Elevator Site Requirements

- The temperature of the elevator hoistway shall be below 40°C
- The following conditions are required for maintaining elevator performance.
- a. The relative humidity shall be below 90% on a monthly average and below 95% on a daily average.
- b. Prevention shall be provided against icing and condensation occurring due to a rapid drop in the temperature in the elevator hoistway.
- c. The elevator hoistway shall be finished with mortar or other materials so as to prevent concrete dust.
- Voltage fluctuation shall be within a range of +5% to -10%.

Ordering Information

Please include the following information when ordering or requesting estimates: $\frac{1}{2} \left(\frac{1}{2} \right) = \frac{1}{2} \left(\frac{1}{2} \right) \left(\frac{1}{2} \right)$

- The desired number of units, speed and loading capacity.
- The number of stops or number of floors to be served.
- The total elevator travel and each floor-to-floor height.
- Operation system.
- Selected design and size of car.
- Entrance design.
- Signal equipment.
- A sketch of the part of the building where the elevators are to be installed.
- The voltage, number of phases, and frequency of the power source for the motor and lighting.

17





Mitsubishi Elevator Inazawa Works has acquired ISO 9001 certification from the International Organization for Standardization based on a review of quality management. The company has also acquired environmental management system standard ISO 14001 certification.



Eco Changes is the Mitsubishi Electric Group's environmental statement, and expresses the Group's stance on environmental management. Through a wide range of businesses, we are helping contribute to the realization of a sustainable society.

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE : TOKYO BLDG., 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

Visit our website at: http://www.mitsubishielectric.com/elevator/



⚠ Safety Tips: Be sure to read the instruction manual fully before using this product.