





# **Elevate Your Efficiency of Material-Handling Tasks**

# Energy Saving, Helical Gear Driven Traction Machine GFC-L2 freight elevator equipped with high efficient helical gear driven traction machine. Through the advanced technology of precision gear cutting and grinding

GFC-L2 freight elevator equipped with high efficient helical gear driven traction machine. Through the advanced technology of precision gear cutting and grinding, the traction machine brings more comfortable and quiet riding for the passengers. Moreover, it saves more than 15% electricity compared with the traditional worm gear driven traction machine.

ADVANCED TECHNOLOGIES

For the large capacity of car, we use worm gear traction machine to transport more goods. (applicable in the range of capacity 2000/2500kg at speed 90/105 min/m and more than 3000kg)

# Varible Voltage Varible Frequency (VVVF) Control System

The application of VVVF control to the freight elevator is a great breakthrough of technology. Not only does it provide smooth and steady operation, but also greatly improves the efficiency of energy utilization to achieve more energy saving performance.

# Data Network with Artificial Intelligence and Friendly Man-Machine Interfacing

The elevator system configures with a data network. Developed using leading edge technology, it connects with microprocessors at each distributed modules through a serial transmission line. Each module is assigned appropriate intelligent features, resulting in a substantial improvement in man-machine interfacing. A mutual check function ensures further reliability and efficiency in data.

#### More User Friendly Operating Features

To ensure the safety and smooth riding for both passengers and goods, the new series GFC-L2 freight elevator employs more user friendly features. They have been strictly tested and simulated in the factory before delivery, thus the reliability is greatly improved and possibility of breaking down is reduced.



Energy saving, helical gear driven traction machine (applicable in the range of capacity under 1500kg, speed under 105 m/min & capacity under 2500kg, speed under 60m/min)



NO.1

Freight elevators of less than 2500kg capacity can only be loaded by handtrucks with casters. Goods cannot be loaded by forklift. Please consult our local agents if you plan to use a forklift to load and unload goods with our traction-type freight elevators of 2500kg capacity or more.

## CAR DESIGNS

## **ENTRANCE DESIGNS**

#### ▲ Type FCD-A Specification

Car Type	FCD-A	FCD-B					
Lighting	Fluorescent lighting through embed milky-white resin flat covers	Fluorescent lighting through embed milky-white resin covers					
Ventilation equipment	Diffuser	Electric blower with slit vents					
Walls and doors	Painted steel sheet						
	Stainless steel hairline (Optional)						
Entrance columns	Stainless steel hairline						
Car wall protection plate	Stainless steel hairline (for po	ainted steel walls only)					
Flooring	Steel checker plate with blac	k paint					
	Durable vinyl tile (Optional)						
Sill	Extruded hard aluminum (Capacity of 2,000kg or less)						
	Steel plate with black paint (Capacity over 2,000kg)						

Detailed disposing of fan and lighting, please consult our local agents.

▲ Type FCD-B

Elevator color shown is slightly different from actual tone.

#### Specification

Door frame	Painted steel sheet
	Stainless steel hairline (Optional)
Doors	Painted steel sheet
	Stainless steel hairline (Optional)
Sill	Extruded hard aluminum (Capacity of 2,000kg or less)
	Steel plate with black paint (Capacity over 2,000kg )






Elevator color shown is slightly different from actual tone.

# FINISH COLORS AND PATTERNS


# FEATURES FOR COMFORT, CONVENIENCE AND SAFETY

### Durable Vinyl Tiles (For Car Flooring)

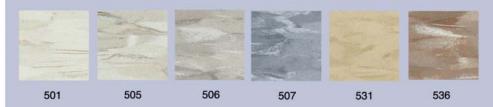

## Painted Finish

(For Car Walls / Car Doors & Entrance Doors / Door Frames)

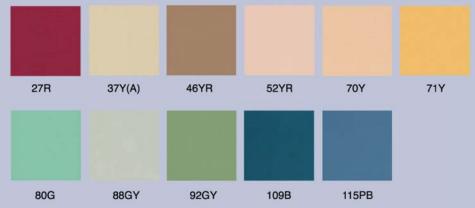

Color shown is slightly different from actual tone.

#### False Call Canceling - Car Button Type (FCC-P)

If the wrong car button is pressed, it can be canceled by quickly pressing the same button again twice.

#### Non-Service to Specific Floors - Car Button Type (NS-CB) [Optional]

Service to specified floors can be restricted by locking out car buttons from the car operating panel.

#### Repeated Door - Close (RDC)

If the elevator doors cannot fully close because of blocking of an object in the door track (such as a pebble or debris), the doors will repeatedly open and close until the object is removed.

### Extended Door - Open Button (DKO-TB)

By pressing this button in the car, the doors will remain open for an extended time to facilitate the loading of materials, luggage, etc.

#### Door Load Detector (DLD)

When excessive door load has been detected while opening or closing, the doors immediately reverse.

#### Mitsubishi Emergency Landing Device (MELD) [Optional]

Upon power failure, a car equipped with this function automatically moves and stops at the nearest floor using a rechargeable battery, and the doors open to ensure passenger safety. (Maximum allowable floor-to-floor distance is 10 meters.)

(MELD is only applied bellow: 750~1500 kg 45~105 m/min and 2000~2500 kg 45~60 m/min.)

# OPERATING SYSTEMS & SIGNAL EQUIPMENT

#### Car Operating Panels



#### Specification

Faceplate	Stainless steel hairline
Display panel	Smoky gray plastic, matte surface
Direction light and indicator	Digital LED dot-matrix display (orange color when illuminated)
Call button	Micro stroke click button in gray plastic
Response light	LED (orange color when illuminated)

**CBF-C511** 

#### Hall Position Indicators



PIH-D330 (Optional)



PID-D330 (Optional)
Assembled into transom panel

#### Specification

Faceplate	Stainless steel hairline (PIH-D330
Display panel	Smoky gray plastic, matte surface
	Digital LED dot-matrix display (orange color when illuminated)

#### Hall Buttons



HBF-A210

(Optional)

HBF-C210 (Optional)

1

Ψ

#### Specification

Faceplate	Stainless steel hairline with dark gray plastic case (HBF-A210)
racepiate	Stainless steel hairline (HBF-C210)
Call button	Micro stroke click button in gray plastic
Response light	LED (orange color when illuminated)

#### Hall Position Indicators and Call Buttons



#### Specification

Response light	LED (orange color when illuminated)
Call button	Micro stroke click button in gray plastic
Direction light and indicator	Digital LED dot-matrix display (orange color when illuminated)
Display panel	Smoky gray plastic, matte surface
	Stainless steel hairline (PIF-C210 / PIF-C220 / PIF-C211 / PIF-C221)
Faceplate	Stainless steel hairline with dark gray plastic case (PIF-A210 / PIF-A220)

Elevator color shown is slightly different from actual tone.

Elevator color shown is slightly different from actual tone.


# INSTALLATION DRAWINGS

Capacity 750Kg~1500Kg (45,60,90,105m/min)

## Hoistway Plan Hoistway Section Hoisting hook (by owner) Machine room Machine Room Plan Power supply for lighting (by owner) Traction machinery power supply BM Vent.Window (by owner) (PD) Control Ventilation fan panel

#### \* The above installation drawings (1:1 roping) are only applicable for rated capacity under 1500kg.


### Capacity 2000Kg~2500Kg(45,60m/min)

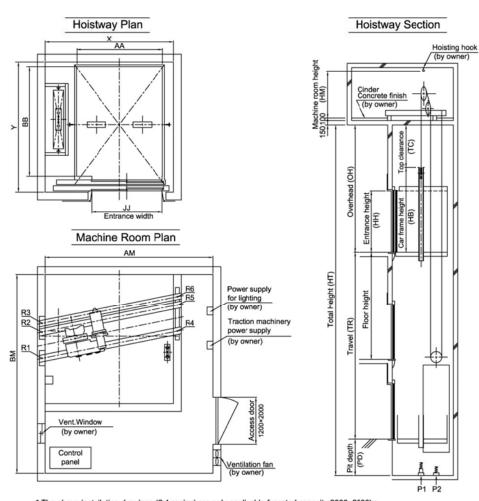


<sup>\*</sup> The above installation drawings (2:1 roping) are only applicable for rated capacity 2000~2500kg.

### Capacity 2000Kg~2500Kg(90,105m/min)

## Capacity 3000Kg(30,45,60m/min) > 3500Kg(30,45m/min)

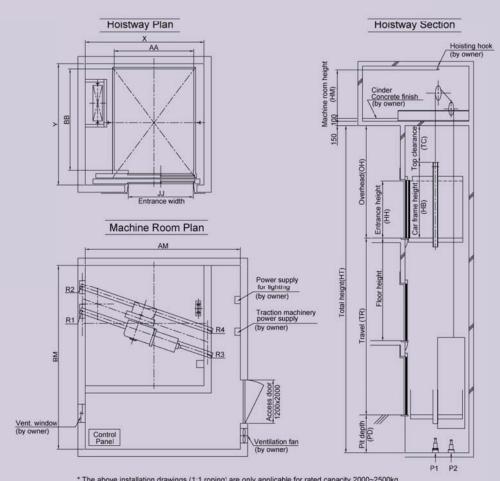


<sup>\*</sup> The above installation drawings (1:1 roping) are only applicable for rated capacity 2000~2500kg.

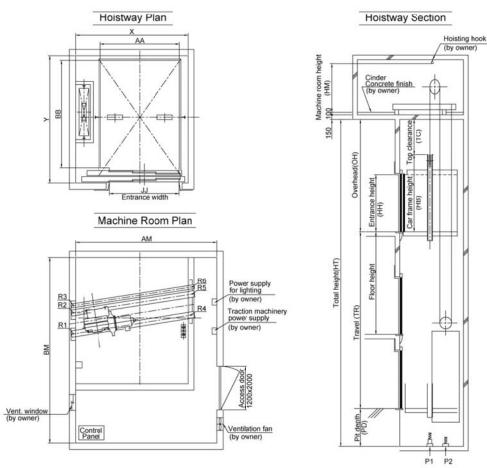


<sup>\*</sup> The above installation drawings (2:1 roping) are only applicable for rated capacity 3000~3500kg.

## Capacity 3500Kg(60m/min) > 4000Kg (30.45m/min)

## Capacity 5000Kg (30,45m/min)

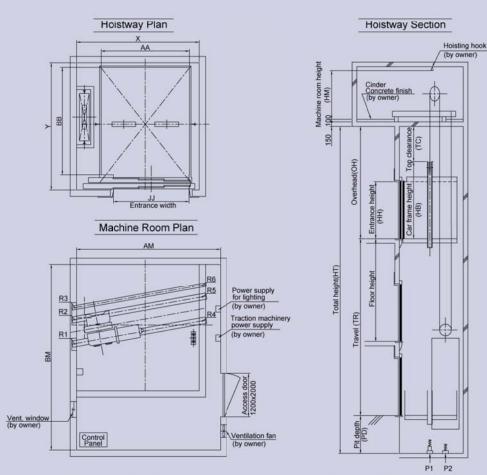

<sup>\*</sup> The above installation drawings (2:1 roping) are only applicable for rated capacity 3500~4000kg.

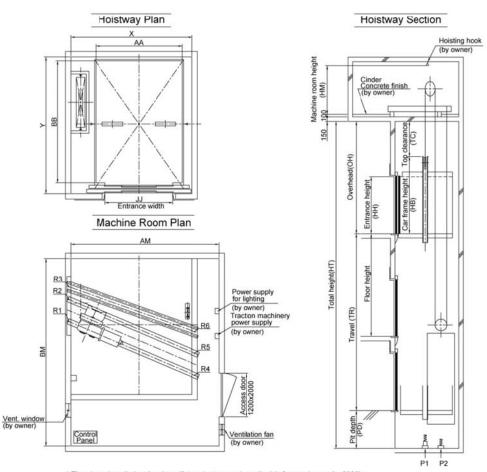

<sup>\*</sup> The above installation drawings (2:1 roping) are only applicable for rated capacity 5000kg.

## SUPPLY SCOPE (1)

## SUPPLY SCOPE (2)

#### Horizontal Dimensions and Reaction Loads

Capacity 750Kg ~ 1500Kg (45,60,90,105m/min)

	Door			Dim	ensions(	Reaction loads (kN)						
Rated capacity		Rated speed (m/min) Entrar widt	Entrance	Car internal	Minimum	Minimum		Machin	Pit			
(kg)	type			(AAxBB)	hoistway (XxY)	machine room (AMxBM)	R1	R2	R3	R4	P1	P2
		45		1500x2000	2300x2570	3000x4000					71.7	61.1
750	28	60	1200				27.5	25.8	19.3	26.9	75.3	63.5
750		90									87.0	73.1
		105									102.7	86.3
		45		1800x2200	2720x2720	3400x4400	39.1	30.0	27.8	33.0	85.7	70.2
4000		60	1500								95.1	79.0
1000	2S	90	1500								111.6	92.8
		105									131.7	109.5
		45									126.1	102.7
4500	00	60	1700	2200x2400	2420-2405	40005400	E0.7	39.9	37.5	44.5	125.3	100.9
1500	28	90	1700		3130x3105	4000x5100	50.7			44.5	147.0	120.0
		105									173.5	142.0

#### Capacity 2000Kg ~ 2500Kg (45,60m/min)

				Dimensions(mm)			Reaction loads (kN)							
Rated capacity (kg)	Door	Rated speed	Entrance width JJ	Car internal (AAxBB)	Minimum hoistway (XxY)	Minimum machine room (AMxBM)	Machine room						Pit	
	type	(m/min)					R1	R2	R3	R4	R5	R6	P1	P2
	V2.02	45	1800	2200x2800	3280x3320	4300x5100	53.1	42.0	38.7	57.3	13.4	5.0	158.2	126.9
2000	2\$	60											166.4	133.7
2500	20	45	2100	2500x3000	3530x3595	4500x5700	66.8 53.0	E2.0	50.8	73.4	16.8	6.5	182.0	142.8
	38	60	2100					30.0	13.4	10.0	0.5	218.8	177.7	

#### Capacity 2000Kg ~ 2500Kg (90, 105m/min)

1,150.0			Entrance width JJ	Dim	Reaction loads (kN)							
Rated capacity	Door	Rated speed		Car internal (AAxBB)	Minimum hoistway (XxY)	Minimum		Machin		Pit		
capacity (kg)	type	(m/min)				machine room (AMxBM)	R1	R2	R3	R4	P1	P2
2000	2S	90	1800	2200x2800	3280x3350	4300x5100	65.4	53.7	46.2	50.1	187.4	151.0
2000	20	105									221.2	178.7
	38	90	2100	2500×3000	3530×3625	4500×5700	68.1	86.8	49.7	75.8	247.6	196.0
2500		105								75.0	292.9	231.4

#### Capacity 3000Kg ~ 5000Kg (30,45,60m/min)

1990, 1990				Dimensions(mm)				Reaction loads (kN)						
Rated	Door		Entrance width	Car internal	Minimum hoistway (XxY)	Minimum machine room	Machine room						Pit	
(kg)	type	(m/min)	JJ	(AAxBB)		(AMxBM)	R1	R2	R3	R4	R5	R6	P1	P2
		30											188.1	145.9
3000	3000 3S	45	2200	2500×3400	3570×4025	4490×5900	67.6	52.5	47.8	70.9	14.1	5.5	210.4	163.2
2000		60											221.5	171.9
		30			3885×4025	4025 4555×5900				05.0	16.0	6.3	226.8	177.6
3500	3S	45	2400	2800×3400			80.5	63.6	59.0	85.0			253.8	198.7
		60					97.2	73.9	69.9	97.9	20.6	7.6	308.6	250.6
4000	200	30	2400	3000×4000	4175×4550	4555×5900	96.3	72.4	67.9	98.1	20.5	7.4	262.7	206.4
4000	200	45	2400	3000×4000	417544550	U 4000×0900	90.3	96.3 73.1	67.9	96.1	20.5	7.4	293.9	230.9
5000	200	30	2500	3200×4500	4510×5050	5495×6950	95.3	89.1	99.1	23.4	21.9	4040	315.5	245.0
5000	200	2CO 45	2500	3200*4500	45 10*5050	5495×6950	95.3	09.1			21.9	104.2	352.4	273.5

Freight elevators of less than 2500kg capacity can only be loaded by handtrucks with casters. Goods cannot be loaded by forklift. Please consult our local agents if you plan to use a forklift to load and unload goods with our traction-type freight elevators of 2500kg capacity or more.

## SUPPLY SCOPE (3)

## SUPPLY SCOPE (4)

#### Maximum Number Stops, Travel and Minimum Floor Height

Rated capacity (kg)	Rated speed (m/min)	Maximum number of stops	Maximum travel (m)	Minimum floor height (mm)		
	45		40			
750~2500	60 90 105	16	60			
3000 - 3500	30 45 60	8	40	HH+700		
4000 - 5000	30 45					

#### Vertical Dimensions

Rated capacity (kg)	Rated speed (m/min)	OH (mm)	PD (mm)	TC (mm)	HH (mm)	HB (mm)	HM (mm)	
	45	4450	1250	1250				
750	60	4650	1550	1450	0400		0000	
750	90	4800	1800	1600	2100	3200	2200	
	105	5000	2100	1800				
	45	4450	1250	1250				
1000	60	4650	1550	1450	2100	3200	2200	
1000	90	4800	1800	1600	2100			
	105	5000	2100	1800				
	45	4450	1250	1250		3200		
1500	60	4650	1550	1450	2100		2200	
1300	90	4800	1800	1600	2100	0200	2200	
	105	5000	2100	1800				
2000	45	4450	1250	1250	2100	3200	2200	
2000	60	4650	1550	1450	2100	3200	2200	
2500	45	4850	1250	1250	2500	3600	2200	
2500	60	5050	1550	1450	2500	3000	2200	

#### Vertical Dimensions


Rated capacity (kg)	Rated speed (m/min)	OH (mm)	PD (mm)	TC (mm)	HH (mm)	HB (mm)	HM (mm)
2000	90	4800	1800	1600	2400	3200	2500
	105	5000	2100	1800	2100		
2500	90	5200	1800	1600	2500	3600	3000
	105	5400	2100	1800	2000		
3000	30	5200	1400	1400	2500	3800	2600
	45	5200	1500	1400			
	60	5400	1800	1600			
	30	5400	1500	1500		3900	2600
3500	45	5400	1600	1500	2500		
	60	5600	1800	1700			
4000	30	5650	1550	1500	2500	4150	2800
	45	5650	1600	1500	2500		
5000	30	5700	1800	1600	2500	4100	2800
	45	6000	1800	1800	2000	4200	


OH: Overhead PD: Pit depth TC: Top clearance HH: Entrance height HB: Car frame height HM: Machine room height


#### NOTE:

Freight elevators of less than 2500kg capacity can only be loaded by handtrucks with casters. Goods cannot be loaded by forklift. Please consult our local agents if you plan to use a forklift to load and unload goods with our traction-type freight elevators of 2500kg capacity or more.

# ENTRANCE LAYOUT

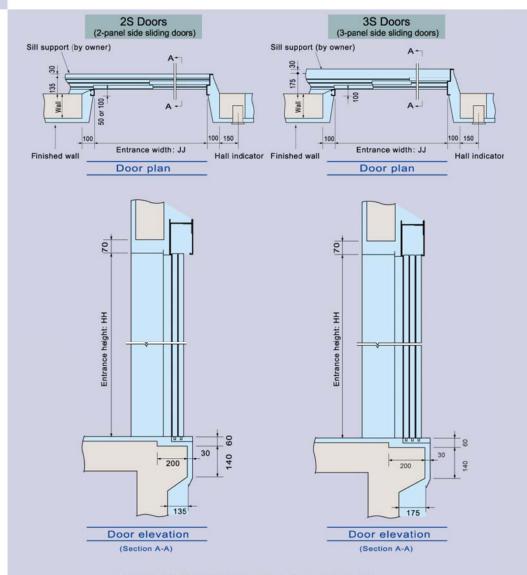

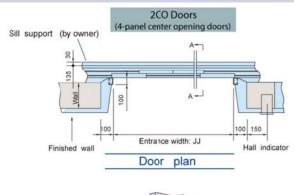

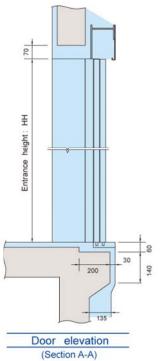

<sup>\*</sup> For other door types, please contact our local agents for detail.

## **FEATURES**

## **Standard Feature**

Feature	Description
<ul><li>Operation System</li></ul>	
(1C-2BC) 1 CAR Selective Collective	The system consists of call buttons in the car, and a riser of up and down destination floor buttons installed at each elevator hall (single button at terminal floors), which connect electrically with microprocessors supervising floor selection and direction of travel. A car will respond to those car and hall calls that comply with its direction of service.
<ul><li>Operational and S</li></ul>	ervice Features
(CCC) Car Call Canceling	When a car has responded to the final car call in one direction, the system regards remaining calls in the other direction as mistakes and clears them from the memory.
(OLH) Overload Holding Stop	A buzzer, as well as voice guidance, sounds to alert the passengers that the car is overloaded. the doors remain open and the car will not leave that floor until enough passengers exit the car.
(SFL) Safe Landing	If a car has stopped between floors due to some equipment malfunction, the controller checks the cause, and if it is considered safe to move the car, the car will move to the nearest floor at a low speed and the doors will open.
(CFO-A) Car Fan Shut Off – Automatic	If there are no calls for a specified period, the car ventilation fan will automatically be turned off to conserve energy.
(CLO-A) Car Light Shut Off – Automatic	If there are no calls for a specified period, the car lighting will automatically be turned off to conserve energy.
(FCC-P) False Call Canceling – Car Button Type	If the wrong car button is pressed, it can be canceled by quickly pressing the same button again twice.
(IND) Independent Service	Exclusive operation where a car is withdrawn from group control operation for independent use, such as maintenance or repair, and responds only to car calls.

## **Standard Feature**

Feature	Description			
Door Operation Features				
(DLD) Door Load Detector	When excessive door load has been detected while opening or closing, the doors immediately reverse.			
(RDC) Repeated Door -Close	Should an obstacle prevent the doors from closing, the doors will repeatedly open and close until the obstacle is cleared from the doorway.			
(ROHB) Reopen with Hall Button	Closing doors can be reopened by pressing the hall button corresponding to the traveling direction of the car.			
(SDE) Safety Door Edge	Sensitive door edges detect passengers or objects during door closing.			
(DKO-TB) Extended Door -Open Button	When a button inside a car is pressed, the doors will remain open longer to allow loading and unloading of a stretcher, baggage, etc.			
<ul><li>Signal and Display</li></ul>	Features			
(ITP) Inter Communica- tion System	A system which allows communication between passengers inside a car and the building personnel.			
■ Emergency Operations and Features				
(ECL) Emergency Car Lighting	Car lighting which turns on immediately when power fails, providing a minimum level of lighting within the car. (Choice of dry-cell battery or trickle-charge battery.)			

## **Optional Feature**

Feature	Description			
Operational and Service Features				
(ABP) Automatic Bypass	A fully-loaded car bypasses hall calls in order to maintain maximum operational efficiency. (Optional in case of 1C - 2BC system.)			
(AS) Attendant Service	Exclusive operation where an elevator can be operated using the buttons and switches located in the car operating panel, allowing smooth boarding of passengers or loading of baggage.			
(HOS/HOS-T) Out-of-Service by Hall Key Switch	For maintenance or energy-saving measures, a car can be taken out of service temporarily with a key switch (with or without a timer) mounted in a specified hall.			
(NS-CB) Non-Service to Specific Floors – Car Button Type	To enhance security, service to specific floors can be disabled using the car operating panel. This function is automatically deactivated during emergency operation.			
(NS/NS-T) Non-Service to Specific Floors – Switch/Timer Type	To enhance security, service to specific floors can be disabled using a manual or timer switch. This function is automatically deactivated during emergency operation.			
■ Door Operation Features				
(SR) Safety Ray	One or two infrared-light beams cover the full width of the doors as they open or close to detect passengers or objects.			
(USDS) Ultrasonic Door Sensor	Sound waves are used to scan a 3D area near the open doors to detect passengers or objects.			

## **Optional Feature**

Feature	Description			
Signal and Display Features				
(AECC/AECH) Car Arrival Chime – Car or Hall	Electronic chimes sound to indicate that a car will soon arrive. (The chimes are mounted either on the top and bottom of the car, or in each hall.)			
(EXCL) Excluding Opera- tion Signal Light	As the reserved operation for emergency (HE-B) function is started, hall indicator instructs the lantern fair to light special-purposely, remind and take advantage of hall passenger's changing to take other lifts.			
■ Emergency Operat	tions and Features			
(EER-P/EER-S) Earthquake Emergency Return	Upon activation of primary and/or secondary wave seismic sensors, all cars stop at the nearest floor, and park there with the doors open to facilitate safe evacuation of passengers.			
(FER) Fire Emergency Return	Upon activation of a key switch or a building's fire sensors, all calls are canceled, all cars immediately return to a specified evacuation floor and the doors open to ensure safe passenger evacuation.			
(OEPS) Operation by Emergency Power Source - Automatic/Manual	Upon power failure, predetermined car(s) use the building's emergency power supply to move to a specified floor, where the doors then open to facilitate the safe evacuation of passengers. After all predetermined car(s) have arrived at the floor, normal operation will be available with only pre-determined car(s).			
(WP) Supervisory Panel	Each elevator's status and operation can be remotely monitored and controlled through a panel installed in building's supervisory room, etc.			
(MELD) Mitsubishi Emergency Landing Device	Upon power failure, a car equipped with this function automatically moves and stops at the nearest floor using a rechargeable battery, and the doors open to ensure passenger safety. (Max. allowable floor-to-floor distance is 10 meters.) (MELD is only applied bellow: 750~1500 kg 45~105 m/min and 2000~2500 kg 45~60 m/min.)			

## NOTES ON INSTALLATION PLANNING

#### **Elevator Site Requirements**

- The temperature of the machine room and elevator shall be below 40°C.
- · The following conditions are required for maintaining elevator performance.
- a. The relative humidity shall be below 90% on a monthly average and below 95% on a daily average.
- b. The machine room and the elevator hoistway shall be free of dust or harmful gas.
- c. The walls, floors, and ceiling of the machine room shall be finished with mortar or other materials so as to prevent concrete dust.
- Voltage fluctuation shall be with in a range of +5% to -10%.

#### Work Not Included in Elevator Contract

The following items are excluded from Mitsubishi Electric's elevator installation work, and are therefore the responsibility of the building owner or general contractor:

- Construction of the elevator machine room with proper beams and slabs, equipped with a lock,
- complete with illumination, ventilation, and waterproofing.

  Access to the elevator machine room sufficient to allow passage of the control panel and traction
- machine. Suspension hook facilities and ladders in the machine room.
- Architectural finishing of the machine-room floor and the walls and floors in the vicinity of the entrance hall after installation has been completed.
- Construction of an illuminated, ventilated, and waterproofed elevator hoistway.
- · A ladder to the elevator pit.
- Provision for the cutting of necessary holes and joists and for making good thereafter as required.
- Separate beams, when the hoistway dimensions markedly exceed the specifications, and intermediate beams when two or more elevators are installed.
- All other work related to building construction.
- The machine-room power-receiving panel and the elevator wiring for illumination, plus the power from them to the electrical room.
- The laying of conduits and wiring between the elevator pit and the terminating point for the devices installed outside the hoistway, such as the emergency bell, intercom, monitoring and security devices, etc.
- The power consumed in installation work and test operation.
- · All the necessary building materials for grouting in of brackets, bolts, etc.
- The test provision and subsequent alteration as required, and eventual removal of the scaffolding as required by the elevator contractor, and any protection of the work as may be required during progress.
- The provision of a suitable, locked space for the storage of elevator equipment and tools during elevator installation.
- The security system, such as a card reader, connected to Mitsubishi Electric's elevator controller, when supplied by the building owner or general contractor.
- \*Work responsibilities in installation and construction shall be determined according to the local laws. Please consult our local agents for details.

#### Ordering Information

Please include the following information when ordering or requesting estimates:

- . The desired number of units, speed, and loading capacity.
- The number of stops or number of floors to be served.
- . The total elevator travel and floor-to floor height.
- · Operation system.
- · Selected design and size of car.
- · Entrance design.
- · Signal equipment.
- · A sketch of part of the building where the elevators are to be installed.
- The voltage, number of phases, and frequency of the power source for the motor and lighting.

MEMO			
-			

MICHA